


**MAX**

# **ELECTRONIC STAPLER**

## ***EH-70FII***

### **INSTRUCTION MANUAL**

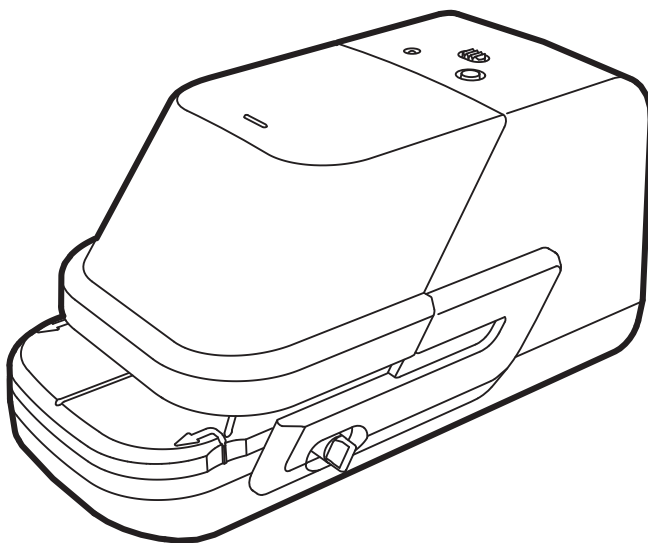

- Prior to using, read this instruction manual.
- Keep this instruction manual.
- It is prohibited to reproduce the contents of this manual without permission.
- The information herein is subject to change without prior notice.





# BEFORE USE

## SAFETY INSTRUCTIONS

### ■ INDICATIONS

This instruction manual uses various indications to help you use this instrument safely and properly.

The following describes those indications.

-  **WARNING:** Negligence could lead to serious injury or death.
-  **CAUTION:** Negligence could lead to an injury, damage of your property, or cause loss of created data.

 Describes operations that may cause damage to the instrument and require a repair, or operations that require resetting the machine, etc., to restore the condition of the instrument.

 Describes the points of operation and tips.

 Describes a functional precaution.

### ■ SYMBOLS

 Denotes "What you should be aware of."

 Denotes "What you must not do." An indication in or near this symbol shows a specific prohibition.

 Denotes "What you must do." An indication in this symbol shows a specific instruction.

|  <b>WARNING</b> |                                                                                                                                                          |
|----------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
|                 | <ul style="list-style-type: none"><li>• Never touch a switch (white) by hand. It could cause an injury when the stapler is abruptly activated.</li></ul> |
|                 | <ul style="list-style-type: none"><li>• Never disassemble or modify this instrument. It could cause a fire, electric shock, or other problems.</li></ul> |

## ⚠ WARNING

|                                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <ul style="list-style-type: none"> <li>• Do not insert foreign substances such as fingers, pens, or wire into this instrument. It could damage the instrument or cause a fire or an injury.</li> <li>• Obtain power directly from a single plug socket. Avoid connecting many wires to one plug socket. It could lead to a fire.</li> <li>• Do not place any heavy material on a power cord. It could cause damage or a fire.</li> <li>• Do not connect/disconnect a power plug with a wet hand. It could cause an electric shock.</li> <li>• Do not insert your fingers into this instrument. It could cause an injury when the stapler is abruptly activated.</li> <li>• Do not splash water or chemicals on the instrument. It could damage the instrument or cause a fire.</li> <li>• Keep a staple cartridge on the place where children can not touch it. If children take a staple, contact a doctor soon.</li> </ul> |
|  | <ul style="list-style-type: none"> <li>• Use correct supply voltage. Other voltage level could damage the instrument or cause a fire or an electronic shock.</li> <li>• Use only specified AC adapter (AC100-240V, 50-60Hz) appended to the instrument.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|  | <ul style="list-style-type: none"> <li>• If water gets inside the instrument, disconnect a power plug immediately from a plug socket and contact your dealer/distributor for a repair. It could damage the instrument or cause a fire or electric shock.</li> <li>• Do not operate the instrument, if it is out of order. If it is operated in an out-of-order state, such as it is smoking, emitting an abnormal sound, or smelling funny, it could cause a fire or electric shock. Disconnect a power plug immediately from a socket and contact your dealer/distributor for a repair.</li> <li>• Disconnect the power cord when replacing the staple cartridge or clearing jammed staples. It could cause an injury when the stapler is abruptly activated.</li> </ul>                                                                                                                                                    |

## ⚠ CAUTION

|                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <ul style="list-style-type: none"> <li>• Do not insert the fingers into the stapling area. It could cause an injury.</li> <li>• Do not touch a motor when replacing a staple cartridge. It is very hot just after stapling and you could get burned.</li> </ul>                                                                                                                                                                                                                    |
|  | <ul style="list-style-type: none"> <li>• Do not share the electronic outlet with equipment (air conditioner, refrigerator, microwave, office automation equipment and so on) that requires a large capacity. The voltage drops and the instrument could malfunction.</li> <li>• Do not put paper or cloth on the instrument. It could damage the instrument or cause a fire.</li> <li>• Do not staple any other paper except PPC paper. It could damage the instrument.</li> </ul> |
|  | <ul style="list-style-type: none"> <li>• When the instrument is not used for a long period of time, be sure to disconnect a power plug from a power socket for safety.</li> <li>• When moving the instrument, be sure to disconnect a power plug from a power socket for safety. Or the cord could be broken and cause a fire or electric shock.</li> </ul>                                                                                                                        |

## CAUTION



- Clean a power cord plug regularly. Dust on the plug could cause a fire.
- When disconnecting a power cord, be sure to hold a power plug. Do not pull on the power cord, or the cord could be broken and cause a fire or electric shock.
- Do not install the instrument on the place that is not level or that is subject to vibration. It could damage the instrument or cause an injury because it might fall or drop.
- Wash your hands / body immediately with soap if the grease is attached on them when replacing a staple cartridge.
- Use only specified AC adapter (AC100-240V, 50-60 Hz) appended to the instrument.
- Use the instrument indoor dry location. It could cause an electric shock or damage the instrument when operating it in the high humidity place.

## REQUEST

In order to prevent problems with the instrument, observe the following precautions.

- Install this instrument away from the following places:
  1. Any place that catches direct sunlight or is located close to a heat source.
  2. Any place that has dust or high humidity.
  3. Any place that is not level or that is subject to vibration.
  4. Any place that the temperature goes below 0°C /32°F or over 40°C /104°F.
- Use only MAX No. 70FE Staple Cartridge.
- Use a dry cloth to clean dirt of the instrument. Do not use solvents (alcohol, benzene, thinner, etc.) or a damp cloth.
- This machine does not staple when Case cap is opened because of safety. Close Case cap correctly when stapling.

## CONTENTS


---

|           |                                             |           |
|-----------|---------------------------------------------|-----------|
| <b>1</b>  | <b>PACKAGE CONTENTS .....</b>               | <b>5</b>  |
| <b>2</b>  | <b>NAME OF EACH SECTION .....</b>           | <b>6</b>  |
| <b>3</b>  | <b>LOADING THE STAPLE CARTRIDGE .....</b>   | <b>7</b>  |
| <b>4</b>  | <b>STAPLING AUTOMATICALLY .....</b>         | <b>9</b>  |
| <b>5</b>  | <b>STAPLING MANUALLY .....</b>              | <b>10</b> |
| <b>6</b>  | <b>STAPLING ON THE CORNER .....</b>         | <b>11</b> |
| <b>7</b>  | <b>REPLACING THE STAPLE CARTRIDGE .....</b> | <b>12</b> |
| <b>8</b>  | <b>CLEARING JAMMED STAPLES .....</b>        | <b>14</b> |
| <b>9</b>  | <b>SPECIFICATIONS .....</b>                 | <b>15</b> |
| <b>10</b> | <b>TROUBLESHOOTING .....</b>                | <b>16</b> |

# **1** PACKAGE CONTENTS

---


**EH-70FII (1pc)**

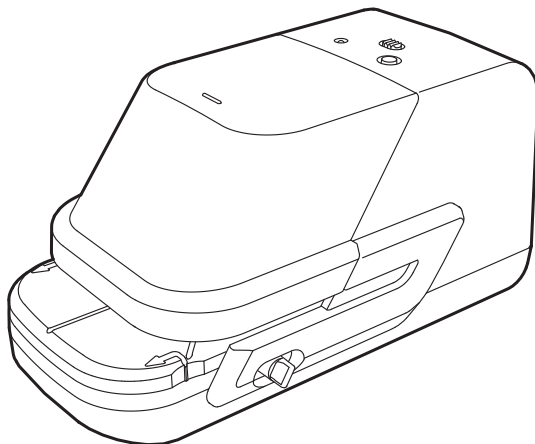


**Instruction manual (1pc)**




**AC adapter (1pc)**

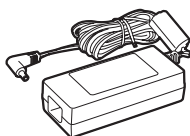

**No.70FE Staple cartridge (1pc)**

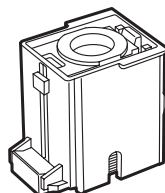


**Power cord (1pc)**

 

(This cord is for USA model.  
The plug is different depends  
on each model.)

## 2 NAME OF EACH SECTION

---

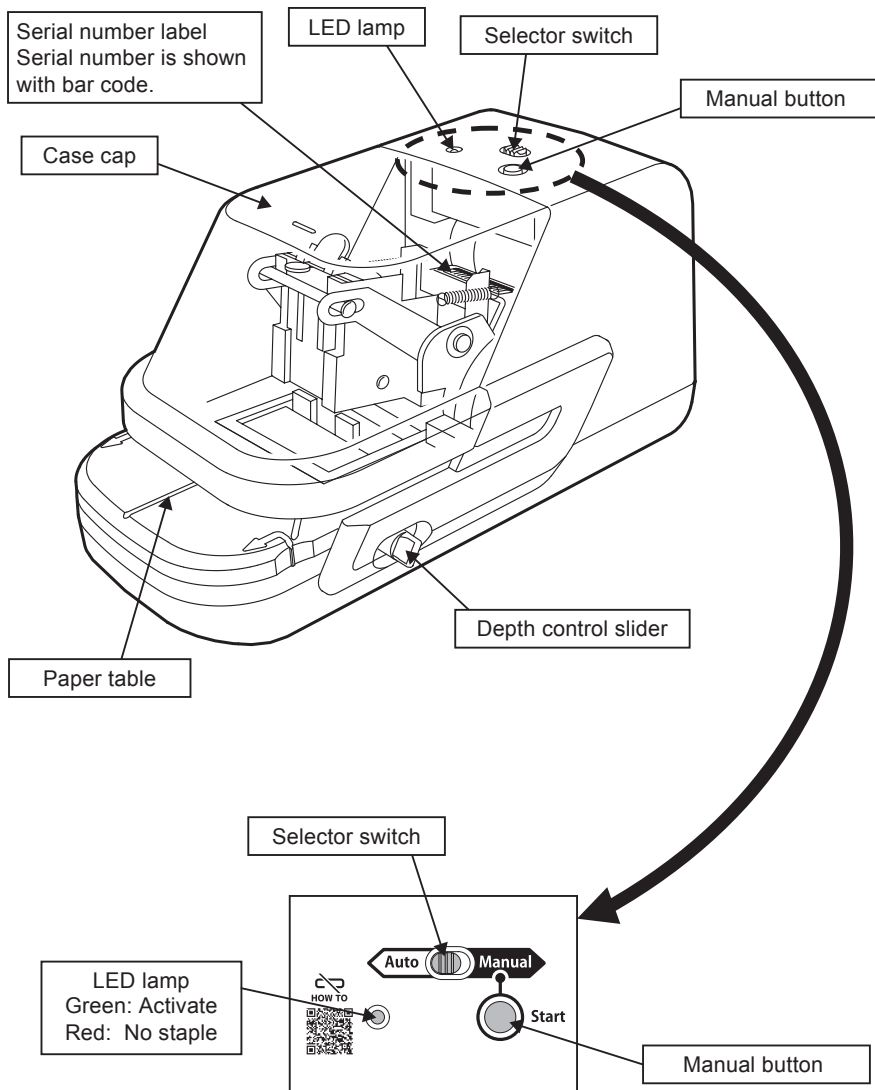


### 3


## LOADING THE STAPLE CARTRIDGE

**Prior to loading the staple cartridge into the machine, prepare and check it.**

- (1) As shown in the figure, pull the stopper attached below the staple cartridge in the arrow direction to remove it.

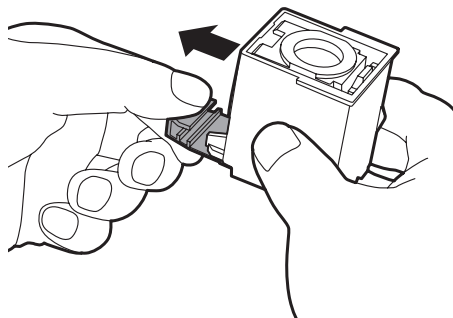

- (2) If a staple sheet is come out of the cartridge, push it into the cartridge. It could cause a jammed staple.

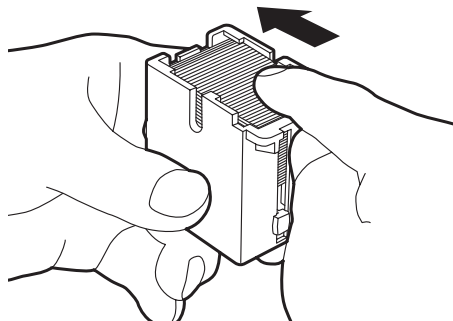


### WARNING




Disconnect the power cord when loading the staple cartridge or clearing jammed staples. It could cause an injury when the stapler is abruptly activated.

**Disconnect the power cord from a plug socket.**

- (1) Open the case cap.

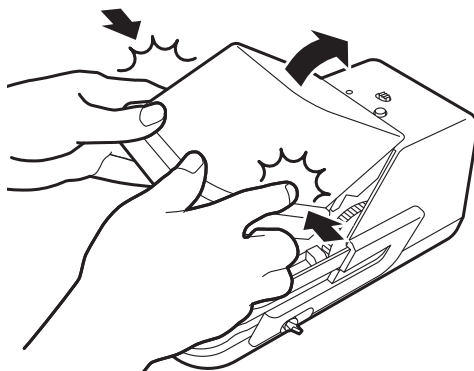

- (2) Load the staple cartridge in the arrow direction.

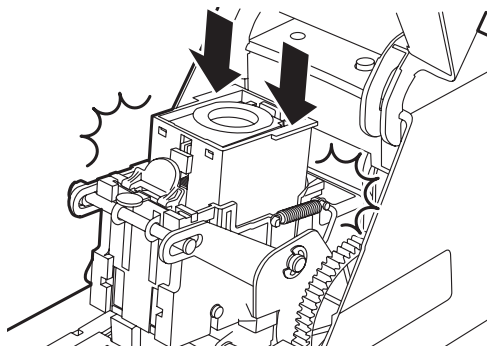

- (3) Close the case cap.



- (4) Connect the power cord to the plug socket.


## 4 STAPLING AUTOMATICALLY

### ⚠ WARNING






Never touch the white-colored switch. It could cause an injury when the stapler is abruptly activated.

- (1) Slide the selector switch to the "Auto," which is located on top of the main body.

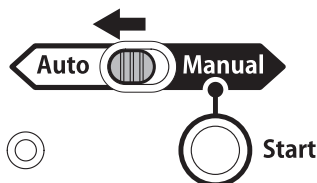

 
- (2) Stapling depth is adjustable within a range of approx. 6 to 18 mm (1/4" to 3/4") for parallel stapling. Loosen the depth control knob and move it back and forth to adjust to your desired depth.

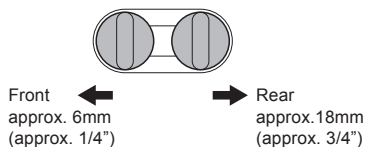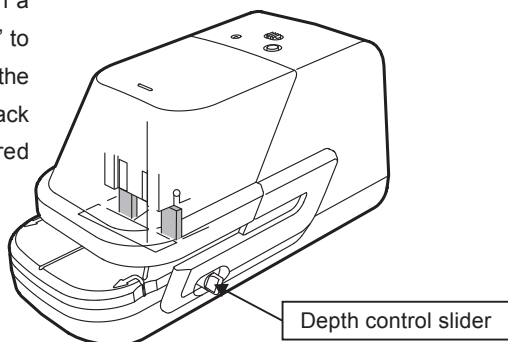

Be sure to turn the depth control knob to the "LOCK" position after adjusting the slider.

Fixing the slider in the "UNLOCK" position could cause the stapling sensor to malfunction or break.

- (3) The mark on the top of the machine is the center of the horizontal stapling position. Move the paper to the right and left to set your desired position.

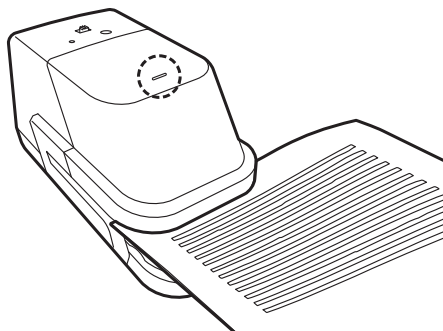


## 5 STAPLING MANUALLY




When stapling the paper on the edge (stapling depth: 3 to 6 mm, 1/8" to 1/4"), use the Manual button.


- (1) Slide the selector switch to the "Manual," which is located on top of the main body.

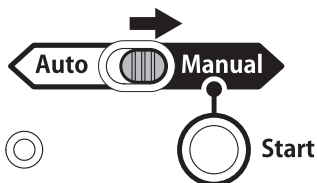

- (2) Pull out the paper table to the near side.

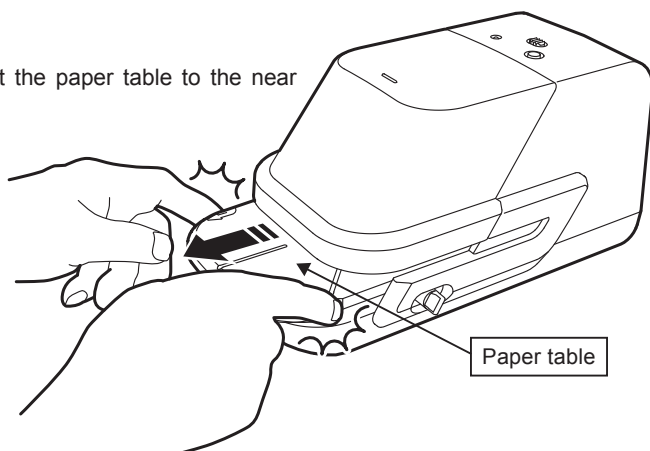


- (3) Insert the paper and press the Manual button to staple it.

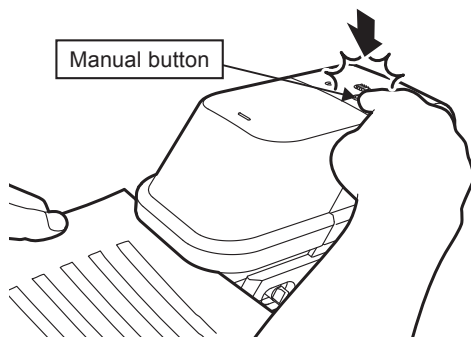

## 6


## STAPLING ON THE CORNER

- (1) When stapling on the corner, insert the corner of the paper.
- (2) If the stapling depth is set to 6 mm (1/4"), the paper will be stapled at the position of about 12 mm (1/2") from its edge.

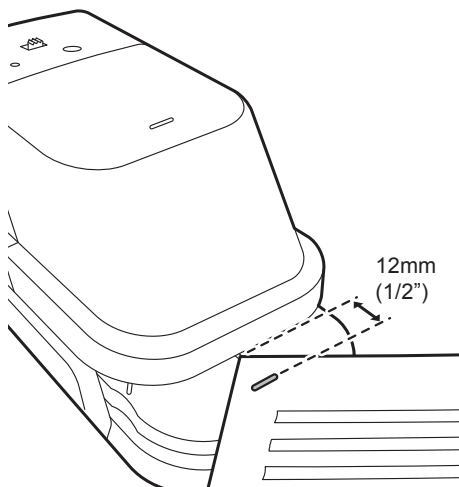

When the machine is used for the first time, it will perform a few (5 – 7) idle strokes without actually stapling papers.

This is normal and occurs while the staples are being fed to the stapling position.

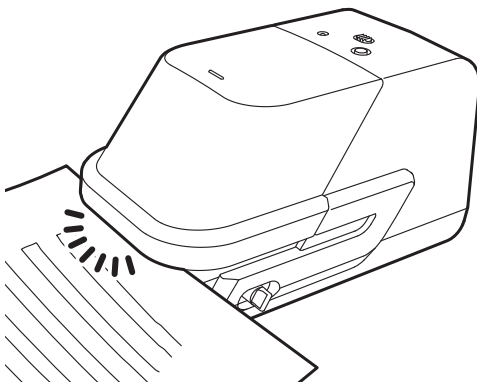

# 7

## REPLACING THE STAPLE CARTRIDGE (No. 70FE)



If the staples run out in the cartridge, the LED lamp on top of the machine will be illuminated in red in order to inform of replacement of cartridge.


In this case, the paper cannot be stapled, even if it is inserted. Replace the cartridge as instructed below.

### **WARNING**




Disconnect the power cord when loading the staple cartridge. It could cause an injury when the stapler is abruptly activated.

- (1) Disconnect the power cord from a plug socket.
- (2) Open the case cap.

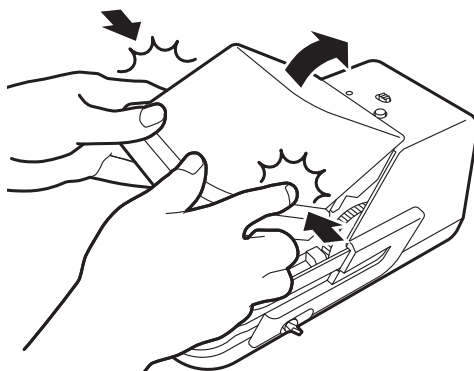

- (3) Hold the cartridge and pull it upward to detach it.
- (4) Load a new cartridge.

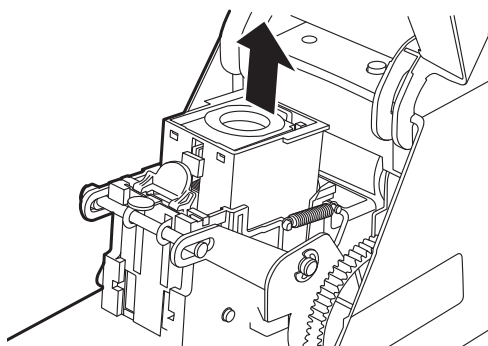




If you have removed the cartridge before it runs out of the staples, the following condition may occur in the cartridge. Seeing the following, load the cartridge again.

- (1) The staple sheet is exposed from the cartridge.

In this case, push the staple sheet into the cartridge.

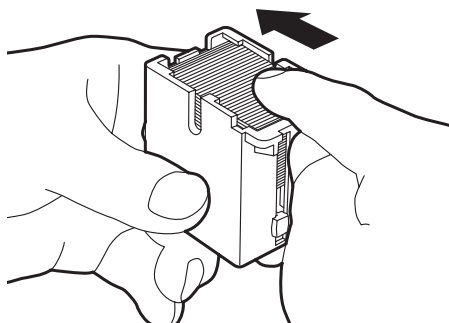

### REQUEST

1. Use MAX genuine staple cartridge "No.70FE."
2. Do not set the broken and shortened staples into the cartridge or load them into the machine to reuse them. They could cause a trouble or staple jam.
3. Do not touch the staple sensor or feeding roller of staple when removing staples from the machine.

## 8

## CLEARING JAMMED STAPLES

If the staples jam, eliminate them as follows:

### WARNING




Disconnect the power cord when clearing jammed staples. It could cause an injury when the stapler is abruptly activated.

- (1) Disconnect the power cord from a plug socket.
- (2) Open the case cap.
- (3) Hold the cartridge and pull it upward to detach it.





- (4) Pushing inside the green lever located on the front of the main body, pull up the opener handle.

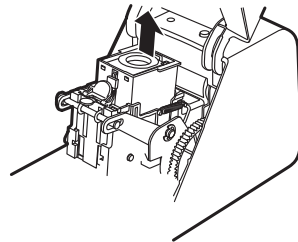

- (5) Remove the jamming staples.

And then, push down the opener handle to its original position.

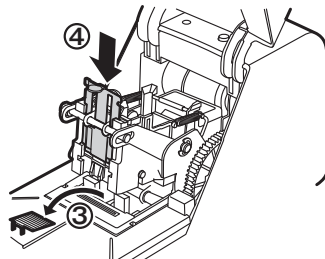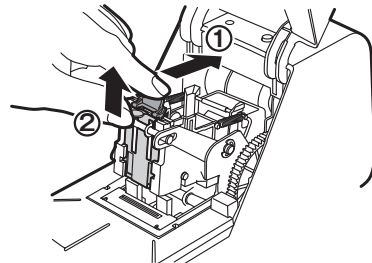

# 9

## SPECIFICATIONS

|                                   |                                                                                                                              |
|-----------------------------------|------------------------------------------------------------------------------------------------------------------------------|
| Model name                        | MAX Electronic Stapler EH-70FI                                                                                               |
| Capacity                          | 2 – 70 sheets (64gsm, 55kg / 16-lb.bond paper)                                                                               |
| Stapling speed                    | 2 staples per second                                                                                                         |
| Stapling system                   | Motor driven link mechanism with automatic feed                                                                              |
| Throat dept                       | Auto stapling: Adjustable approx. 6 to 18 mm (1/4" to 3/4")<br>Manual stapling: Adjustable approx. 3 to 18 mm (1/8" to 3/4") |
| Dimensions                        | 113mm (4-1/2") (W) x 113mm (4-1/2") (H) x 229mm (9") (L)                                                                     |
| Weight                            | 1.5kg (3.3 lbs)                                                                                                              |
| Power consumption                 | Approx. 48W                                                                                                                  |
| Power source                      | DC24V, 2.08A<br>Use only specified AC adapter (AC100-240V, 50-60 Hz) appended to machine.                                    |
| Working Temp. and Humidity ranges | 5°C / 41°F -35°C / 95°F, Below 80% RH (non-condensation)                                                                     |
| Staple cartridge                  | MAX No.70FE staple cartridge<br>Contains a guaranteed minimum of 5,000 staples.                                              |

COMMISSION REGULATION (EU) 2019/1782 of 1 October 2019

### ■ AC ADAPTER INFOMATION

| Information published                                                         | Unit                                                                                                                       |
|-------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|
| Manufacturer's name or trade mark, commercial registration number and address | MAX EUROPE B.V. NL8153.37.401.B01<br>Antennestraat 45, 1322 AH Almere,<br>The Netherlands<br>Phone number: (31)36-546-9669 |
| Model identifier                                                              | 6A-601DA24                                                                                                                 |
| Input voltage                                                                 | AC100-240V                                                                                                                 |
| Input AC frequency                                                            | 50-60Hz                                                                                                                    |
| Output voltage                                                                | DC24.0V                                                                                                                    |
| Output current                                                                | 2.7A                                                                                                                       |
| Output power                                                                  | 64.8W                                                                                                                      |
| Average active efficiency                                                     | 88.0%                                                                                                                      |
| Efficiency at low load (10 %)                                                 | 79.0%                                                                                                                      |
| No-load power consumption                                                     | 0.21W                                                                                                                      |

### REQUEST

1. Stapling capacity depends on the kind of paper. The machine might not staple up to 70 sheets in the other kind of paper. In this case, do not staple it forcibly.
2. In case of stapling continually for a long time, the machine might not staple because the motor would be very hot. In this case, stop operating for 30 minutes or more to cool motor. And then, start to operate again.
3. Operate less than 70 sheets (55kg / 16-lb.bond paper). It could cause damage the machine when operating the machine over the specification.
4. Contact your dealer or distributor with telephone or e-mail if machine would be out of order or you have any problem.

| Phenomenon                                                     | Check point                                         | Remedy                                                                                                        | See page |
|----------------------------------------------------------------|-----------------------------------------------------|---------------------------------------------------------------------------------------------------------------|----------|
| The stapler does not operate when insert the paper.            | Check if the LED status lamp is illuminated in Red. | Load new No.70FE staples.                                                                                     | P7       |
|                                                                | Check if the LED status lamp is blinking in RED.    | Disconnect the power plug immediately from the plug socket and contact your dealer or distributor for repair. | P18      |
|                                                                | Check if the LED status lamp is not illuminated.    | Close the front cover firmly.                                                                                 | P8       |
|                                                                |                                                     | Connect the dedicated AC adapter correctly.                                                                   | P8       |
|                                                                | Check if the selector switch is set to Manual.      | Set No.70FE staple cartridge firmly.                                                                          | P7       |
|                                                                |                                                     | Set the selector switch to Auto.                                                                              | P9       |
| Stapling operation is performed, but the paper is not stapled. | Did you load new No.70FE staples?                   | Press the Manual button for stapling.                                                                         | P10      |
|                                                                |                                                     | Insert discarded copy papers a few (5 to 7) times to feed the staples.                                        | P12      |
|                                                                | The staples may be jamming.                         | Detach No.70EF staple cartridge from stapler and remove remaining staple sheet from the magazine.             | P12      |
|                                                                |                                                     | Follow the appropriate reference procedure.                                                                   | P14      |

The following statement is only effective for the USA market.

## FCC Notice (Class B: EH-70F II)

Note: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



MAX USA CORP.

ADDRESS : 205 Express Street, Plainview, New York, 11803, U.S.A.

PHONE : (516)741-3151    FAX : (516)741-3272



## Global Offices:

### **MAX CO.,LTD.**

6-6 Nihonbashi Hakozaki-Cho,Chuo-Ku,Tokyo,Japan  
TEL: (81) 3-3669-8131

### **MAX USA CORP.**

205 Express St. Plainview, NY, 11803, U.S.A.  
TEL: (1) 800-223-4293

### **MAX EUROPE B.V.**

Antennestraat 45, 1322AH, Almere, The Netherlands  
TEL: (31) 36-546-9669

### **MAX ASIA PTE. LTD.**

101 Cecil Street #16-01 Tong Eng Building, Singapore  
069533  
TEL: (65) 6226-2180

### **MAX CO.,(HK)LTD.**

7-B,Chuan-Kei-Fty Bldg.,15-23,Kin Hong St., Kwai Chung,  
New Territories, Hong Kong  
TEL: (852) 2426-2106

### **MAX (SHANGHAI) CO.,LTD.**

Room 1505, Block E, Jin hongqiao Guangchang, No.2,  
Lane 686, Wuzhong Road, Minhang District, Shanghai,  
P.R.China  
TEL: (86) 21-3133-8105

---